


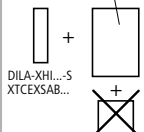


Powering Business Worldwide

DILM(C)7...M(C)15..., DILA(C), DILMP20  
XTCE...B, 7-15A, XTCEC...B, 7-15A  
XTCF...B, 20A, XTRE..., XTREC...



DILM(C)32-XHI..., DILA-XHI...  
XTCEXFAC...  
XTCEXFCLC..., XTCEXFCC...


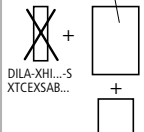


DILM(C)32-XHI..., DILA-XHI...  
XTCEXFAC...  
XTCEXFCLC..., XTCEXFCC...

~~DILA(C)-22 (...VDC)  
+ DILA-XHI(C)(V)04  
(13, 22, 31, 40)  
+ DILA-XWIR11~~

- Mounting** 1 place in position 1 aufsetzen 1 mettre en place 1 装配  
**Montage** 2 latch in 2 rasten 2 encliquer 2 装上  
**Montage** 1 colocar en posición 1 appoggiare 1 осадить 1 嵌入  
**Montaggio** 2 enclavar 2 inserire a scatto 2 зафиксировать  
**Монтаж**


- Dismantling** 3 push 3 schieben 3 pousser 3 推  
**Demontage** 4 remove 4 abziehen 4 retirer 4 拔出  
**Démontage** 3 desplacer 3 inserire 3 задвинуть  
**Smontaggio** 4 extraer 4 estrarre 4 снять  
**Desmontaje**  
**Разборка**

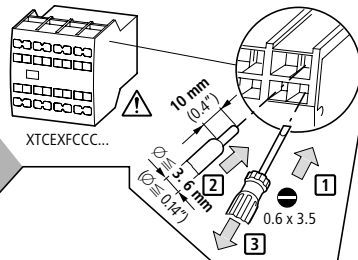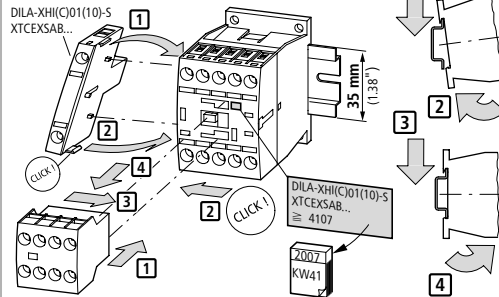


DILA(C)  
DILM(C)7...M(C)15  
DILMP20  
XTCE...B, 7-15A  
XTCEC...B, 7-15A  
XTCF...B, 20A  
XTRE..., XTREC...

DILM32-XHI(C)...  
DILA-XHI(C)...  
DILA-XHI...S  
XTCEXF...  
XTCEXFA...  
XTCEXSAB...

~~DILM(C)7...M(C)15  
XTCEC... + XTRE...~~

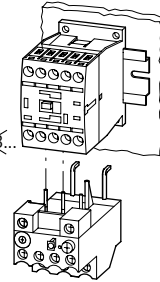

Mounting position – Einbaulage  
Position de montage – Posición de montaje  
Posizione di montaggio – 安装位置  
Положение установки

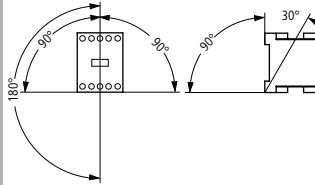


~~XTRE(C)10B22...D  
+ XTCEXFAC(C)04  
(13, 22, 31, 40)  
+ XTCEXFAR011~~

03/12 IL03407013Z (AWA2100-2126, Pub51210)

Instruction Leaflet Istruzioni per il montaggio  
Montageanweisung 安装说明  
Notice d'installation Инструкция по монтажу  
Instrucciones de montaje

DILM..., XTCE..., DILA..., XTRE...

mm <sup>2</sup>	AWG	Nm	lb-in
1 x (0.75 – 6) 2 x (0.75 – 2.5)	18 – 14	1.2	11
1 x (0.75 – 2.5) 2 x (0.75 – 2.5)			
-			

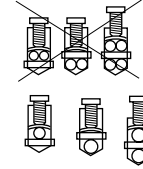


DILM..., XTCEC..., DILAC..., XTREC...


mm <sup>2</sup>	AWG
1 x (0.75 – 2.5) 2 x (0.75 – 2.5)	18 – 14
1 x (0.75 – 1.5) 2 x (0.75 – 1.5)	
1 x (0.75 – 2.5) 2 x (0.75 – 2.5)	



DILM(C)7...M(C)15  
DILMP20  
7-15A XTCE,  
XTCEC...  
XTCE015B...  
XTCF020B...

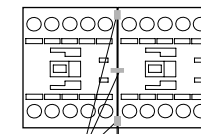

DILM12-XMV  
XTCEXMLB

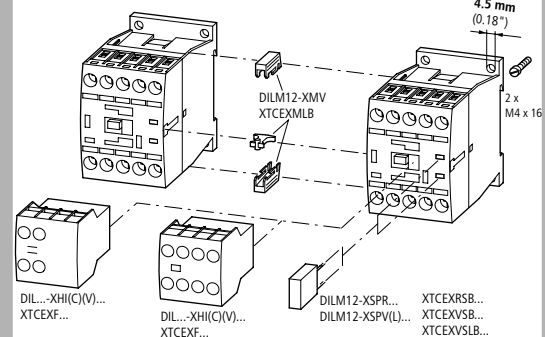

DIL...XHI(C)(V)...  
XTCEXF...

DIL...XHI(C)(V)...  
XTCEXF...

DILM12-XSPR...  
DILM12-XSPV(L)...  
XTCEXRSB...  
XTCEXVSB...  
XTCEXVSLB...



**Danger!**

The opening of the branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the element of an overload relay occurs, the complete overload relay must be replaced.